

ELKAY® BIM Content Library

User Guide – Bottle Filling Stations -

Products ➔ Drinking Water ➔ Bottle Filling Stations ➔ In Wall



LZWSM82K



LZWSM82PK



LZWSM83K



LZWSM83KSA



LZWSM83PK



LZWSMDJOK



LZWSMDJOPK



EZWSM82K



EZWSM82PK



EZWSM83K



EZWSM83PK



EZWSMDJOK



EZWSMDJOPK

Figure 1: EZ Family

LOADING THE MODELS

How to Load the Elkay Family

It is recommended the steps outlined below are followed to properly load the BIM component into a project.

1. Open a Revit Project File (.RVT) and navigate to the Plan View.
2. Go to the 'Insert' tab on the Revit ribbon and select 'Load Family'

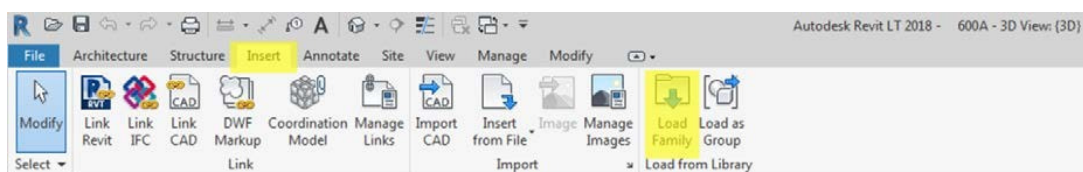


Figure 2: Loading the Family into a Project

3. Navigate to the location of the downloaded Elkay Bottle Filling Stations (RFA file)
4. Click 'OK' to load the component into the project

The family is now copied and embedded into the project. It can be selected from the components button located on the 'Architecture' tab on the main Revit Ribbon.

ACCESSING PRODUCT INFORMATION

How to Access the Data for the EZ Family

To access the data embedded into the component, simply select the desired component and click the 'Edit Type' button at the head of the 'Properties' bar. This is typically located on the left-hand side of the screen.

BIM File Name: Elkay_Drinking-Water_Bottle-Filling-Stations_EZ_Inwall_St1_Asiapac.rfa


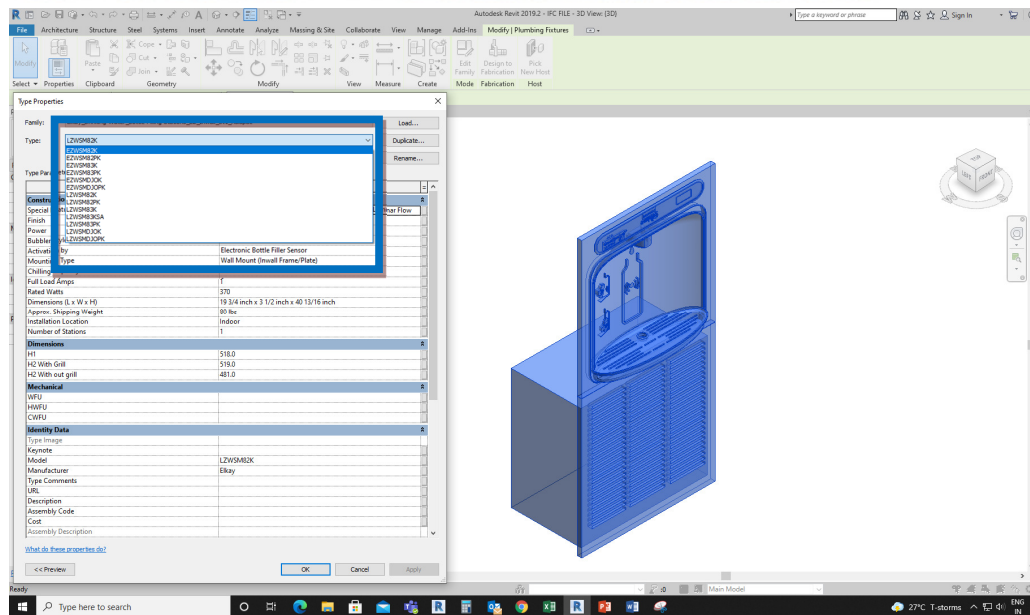



Figure 3: Accessing Additional Data

Master BIM Model : Elkay_Drinking-Water_Bottle-Filling-Stations_EZ_Inwall_St1_Asiapac.rfa

SKU's List in BIM



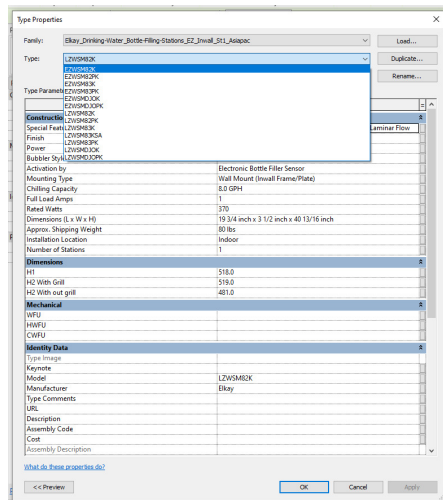

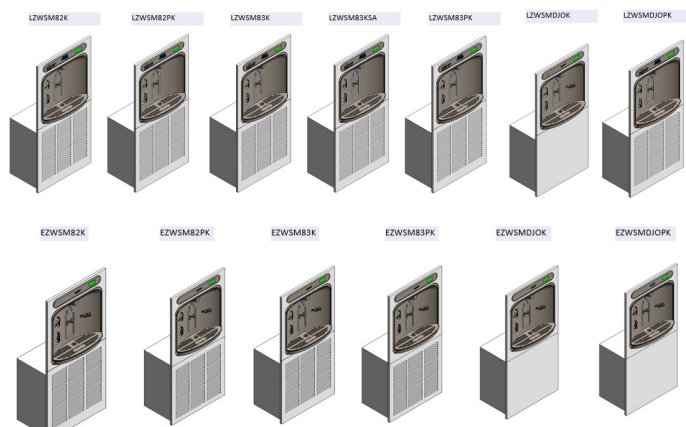SKU's Configured BIM Model



LOADING THE IFC MODEL

How to Load the Elkay IFC Model in Revit

To use an ELKAY IFC model, link the IFC file to a Revit model.

1. (Optional) Before linking an IFC file, click File tab ➤ Open ➤  (IFC Options) and use the Import IFC Options dialog to do the following:
 - Select a default Revit template to use for IFC files.
Note: If a default template is not selected, the first template listed under File Locations in Revit Options will be used.
2. Open the Revit model.
3. Click Insert tab ➤ Link panel ➤  (Link IFC).
4. In the Open IFC File dialog, navigate to the IFC file, select it, and click Open.