

PRODUCT SPECIFICATIONS

Aqua Sentry Replacement Filter. Overall dimensions are 2" x 2" x 11-1/2".

Dimensions:	2" x 2" x 11-1/2"
Shipping Weight:	1 lbs.
Capacity:	500 gal. (1893 L)
Flow Rate:	0.5 GPM (1.9 L/m)
Temperature:	35-100°F (2-38°C)
Initial Pressure Drop:	2-5 PSI (14-34 kPa)
Maximum Pressure:	100 PSI (689 kPa)
Minimum Pressure:	20 PSI (138 kPa)
Water Inlet:	1/4" (6.4mm) O.D. tube
Water Outlet:	1/4" (6.4mm) O.D. tube

Special Note: Replacement filter for LF2 filter system.

- Replacement filter for models with Aqua Sentry filtration system (Coolers + Fountains).
- Filter should be replaced every 500 gallons or 6 months after installation.
- Equipped with Quick-Disconnect fittings on each end of the in-line filter.
- Designed to reduce cysts such as cryptosporidium and giardia, lead, particles and chlorine. Also reduces odors and discoloration from incoming water.
- The filter contains a carbon block with lead sorbent media and the housing is made of rust and corrosion free plastic.
- Filter is certified to NSF 42 and 53 for cyst, lead, atrazine, lindane, particulate class 1, chlorine, taste and odor reduction.



Included with Product: 500 gal replacement filter cartridge

AMERICAN PRIDE. A LIFETIME TRADITION.

Like your family, the Elkay family has values and traditions that endure. For almost a century, Elkay has been a family-owned and operated company, providing thousands of jobs that support our families and communities.



Product Compliance: NSF 42
NSF 53
NSF 372 (lead free)




INSTALLATION INSTRUCTIONS

The filter must be installed in compliance with all state and local laws and regulations governing the installation and use of this product. Disconnect electrical power and close water supply valve before proceeding. The filter must be installed on the water inlet line. Flow indicator (arrow) on filter should point in the same direction as the water flow. After installing new filter, open water supply valve and check for leaks. Flush system sufficiently (approximately 3 minutes) to effectively remove small residue of carbon fines.

NOTE: A water shutoff valve should be installed on the incoming water line to aid in future servicing of filter.

CAUTION

- Filter is designed to reduce lead from incoming water to levels below EPA requirements. Do not use with water that is microbiologically unsafe or with water of unknown quality without adequate disinfection before or after the system.
- Use on water inlet line only. Do not allow installed filter to freeze. Do not attach hot water line to filter.
- Filter should be replaced every 500 gallons (1,893 liters) or approximately 6 months after installation.

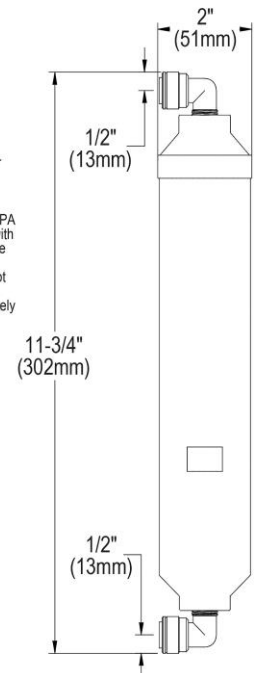

PART: _____ QTY: _____

PROJECT: _____

CONTACT: _____

DATE: _____

NOTES: _____

APPROVAL: _____

In keeping with our policy of continuing product improvement, Elkay reserves the right to change product specifications without notice. Please visit elkay.com for the most current version of Elkay product specification sheets. This specification describes an Elkay product with design, quality, and functional benefits to the user. When making a comparison of other producers' offerings, be certain these features are not overlooked.